



Camaro Passenger Side Cover Installation Instruction Sheet



Please Read Carefully

Our Passenger Side cover is designed to fit over the stock ABS and fuse box systems. If you have altered this area in any way then it is your responsibility to do a test fitment to confirm it will fit.

Every model and year will have some little differences therefore we **strongly recommend that prior to prep and paint you install your Passenger Side cover and do a test fitment first.**


Make sure it fits correctly and there no interferences.

Be sure that you have proper clearance on the top, back, sides and bottom and nothing is rubbing.

Note: If you have ordered your Passenger Side cover with a cut-out and are planning on using the 3G provided metal backer plate then please refer to the "3G Backer Plates Installation Instruction Sheet" in our download center for it's proper installation.


Installing the Cover

To install the Passenger Side cover, first remove the passenger side radiator support rubber seal molding, next remove the passenger side radiator support bracket and just loosen the drivers side radiator support bracket and last remove the factory fuse box cover as shown in (figure "A").

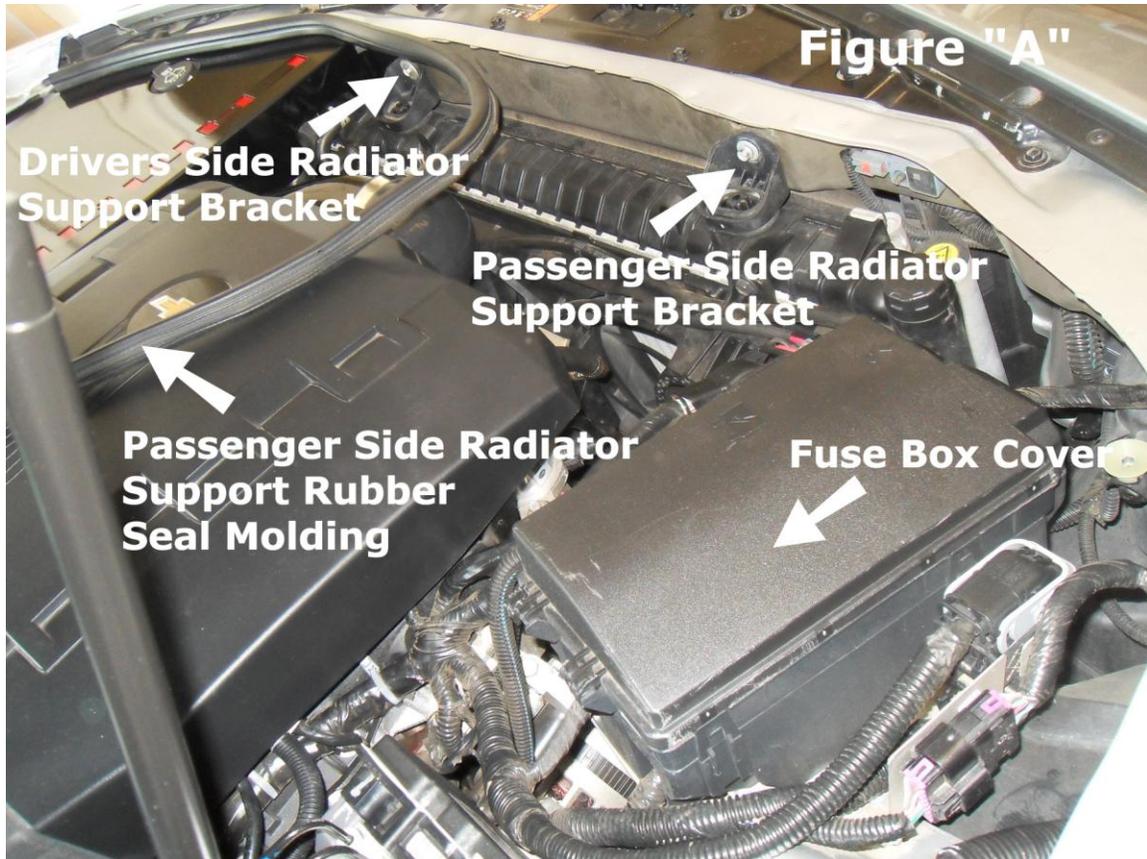

Installing the cover will require some finagling so before you install the cover we recommend applying some painter's tape on the edge of the cover, on the strut tower and ABS lines to protect both your car and covers beautiful finish as shown in (figure "B") and (figure "C"). Apply the tape so it will stay on during the install process but yet not so hard that it will be easily removed once the cover has been installed.

Figure "B"

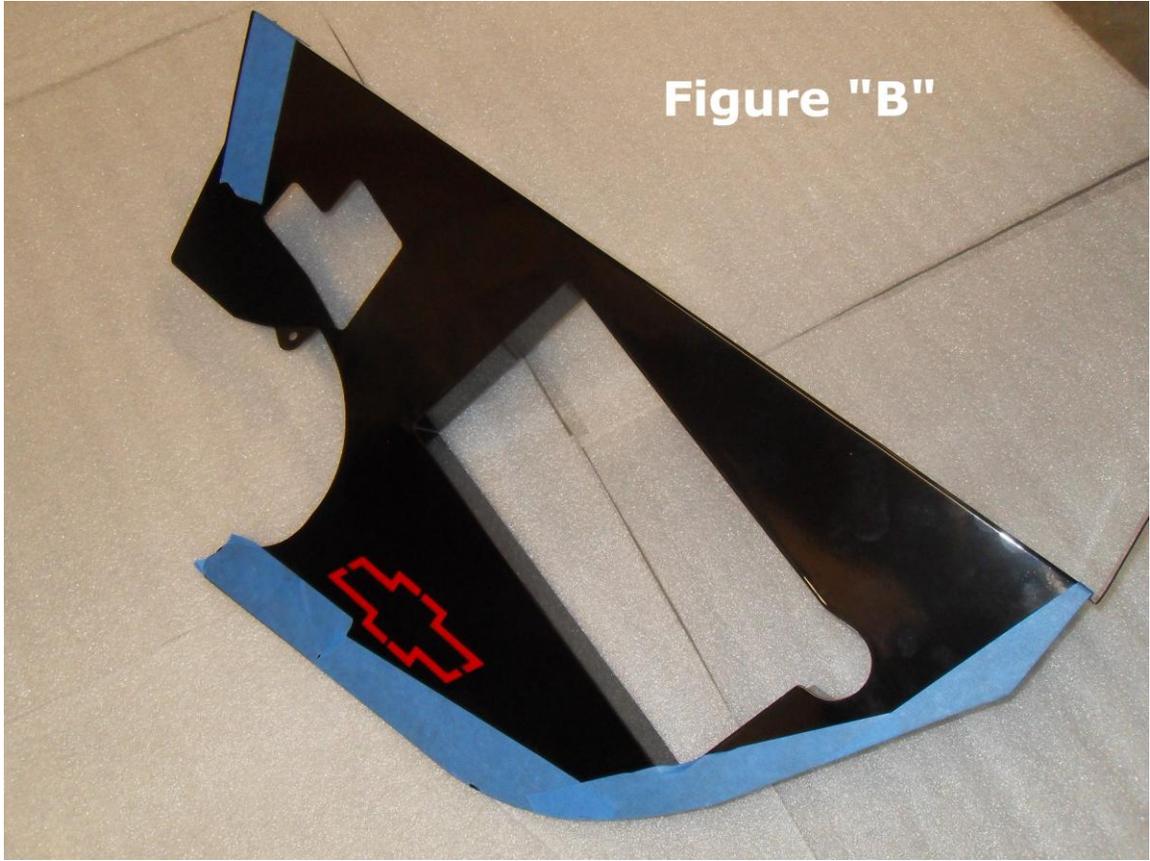


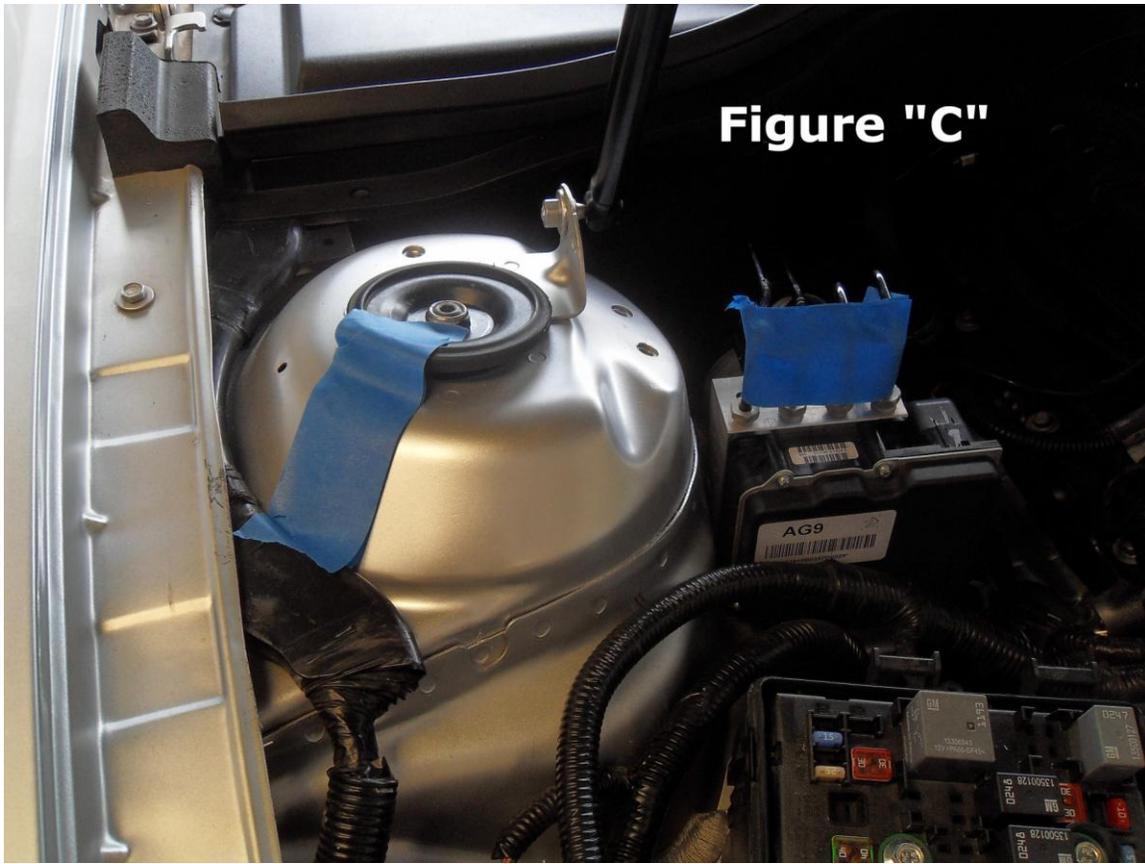


Figure "C"

Now begin installing the cover by sliding the backside under the plastic cowl and the back left side under the fender support sheet metal. Work the left side under the cars sheet metal from back to front then once in slide the cover forward until the covers mounting hole lines up with the factory screw hole on the strut towers engine side and the front covers mounting tab lines up with the passenger side radiator support bracket mounting hole. Again this process will take some finagling so be patient and take your time.

Secure the cover by installing the provided stainless steel m8 x 1.25mm button head socket cap screw and the stainless steel washer into the strut tower as shown in (figure "D") tighten snug but do not over tighten.

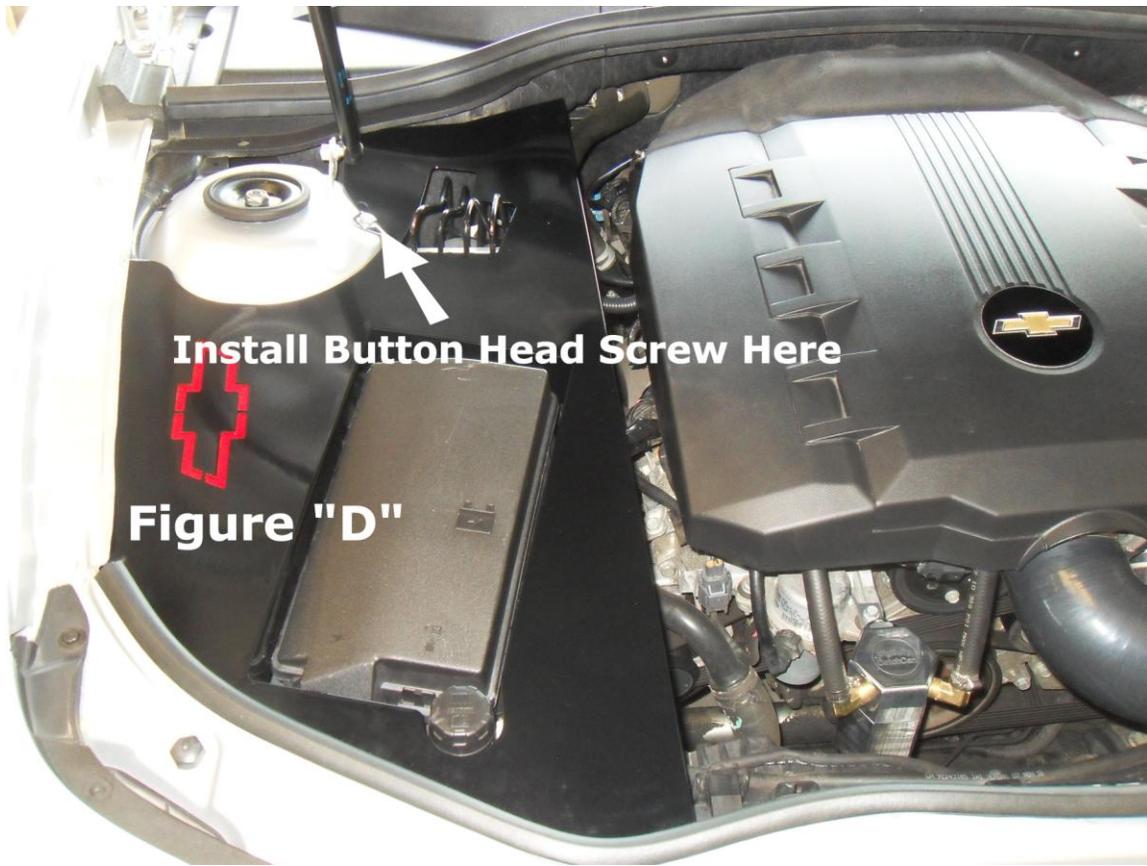

If all looks well and you are happy with the fit and position then you are ready to remove the cover and apply its final finish and then re-install per the previous instructions.

Finally re-install the passenger side radiator support bracket and tighten the driver's side radiator support bracket. Re-install the passenger side radiator support rubber seal molding and last re-install the factory fuse box cover.

Remove the painter's tape.



The following was included in the shipping container

- (1) 3GCUSTOMZ Passenger Side Cover
- (1) Stainless steel m8 x 1.25mm button head socket cap screw
- (1) Stainless steel washer
- (1) Instruction/installation sheet

Note: If you have ordered your Passenger Side cover with a cut-out and are planning on using the 3G provided metal backer plate then please refer to the "3G Backer Plates Installation Instruction Sheet" in our download center for it's proper installation.