



## Right Side Power Steering Cover Installation Instruction Sheet

### **Please Read Carefully**

Our Right Side Power Steering cover is designed to fit over the stock radiator and power steering reservoirs. If you have altered this area in any way then it is your responsibility to do a test fitment to confirm it will fit.

Every model and year will have some little differences therefore we **strongly recommend that prior to prep and paint you install your Right Side Power Steering cover and do a test fitment first.**

Make sure it fits correctly and there no interferences.

Be sure that you have proper clearance on the top, back, sides and bottom and nothing is rubbing.

## Installing the Cover


To install the Right Side Power Steering cover first remove the stock radiator and power steering caps and any after market type caps and/or covers then remove the captive screw as shown in (figure A).

Now rotate the hose clamp on the radiator reservoir overflow hose in the backside of the tank so that the clamp is in the downward position and will not interfere with the Right Side Power Steering cover fitting flat onto it.

Slide the Right Side Power Steering over the plastic tank and make sure as you are pushing down that the (2) hoses on the right side are not in the way and stopping the cover from seating all the way down.

Now re-install the captive screw and both caps as shown in (figure "A").

Note: Do not over tighten the captive screw or you can warp the right side cover and crack your paint.

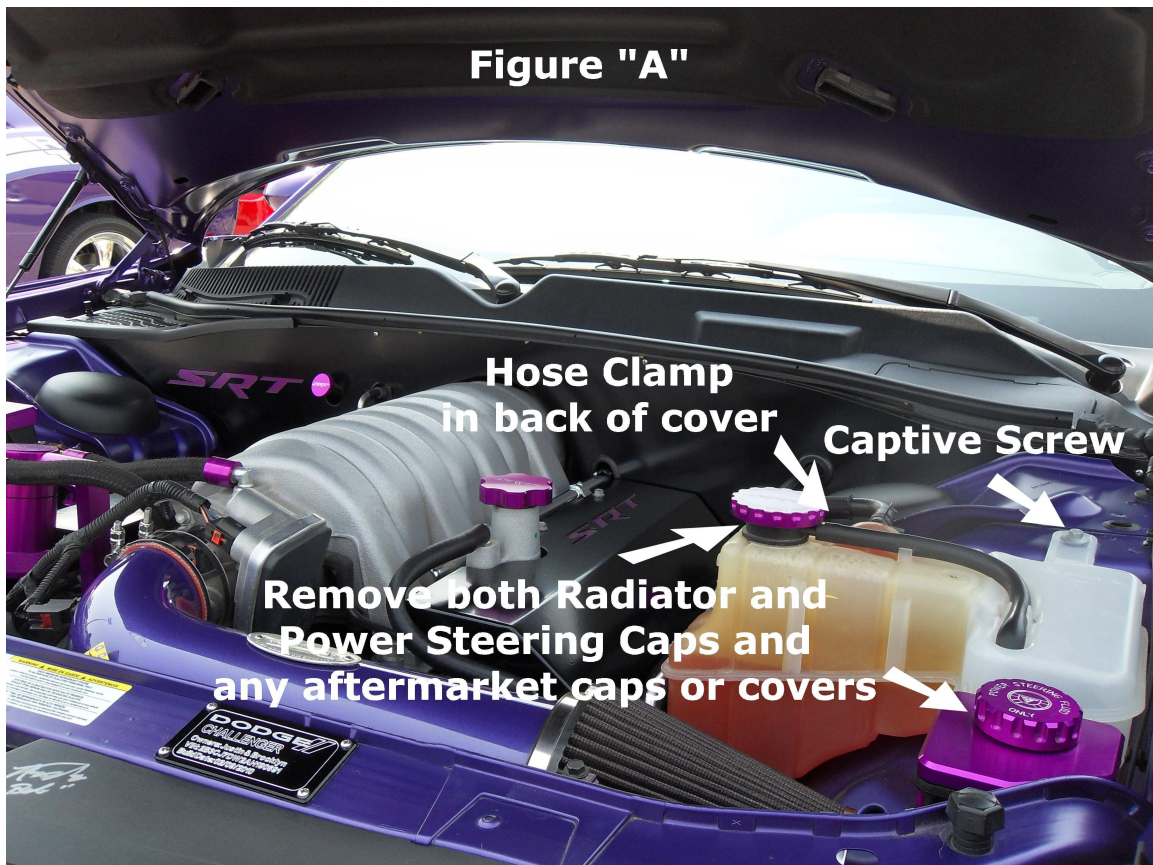

If all looks well and you are happy with the fit and position then you are ready to remove the cover and apply its final finish and then re-install.

**The following was included in the shipping container**

- (1) 3GCUSTOMZ Right Side Power Steering Cover
- (1) Instruction/installation sheet